


## Proper Position for Dewar with a Handle

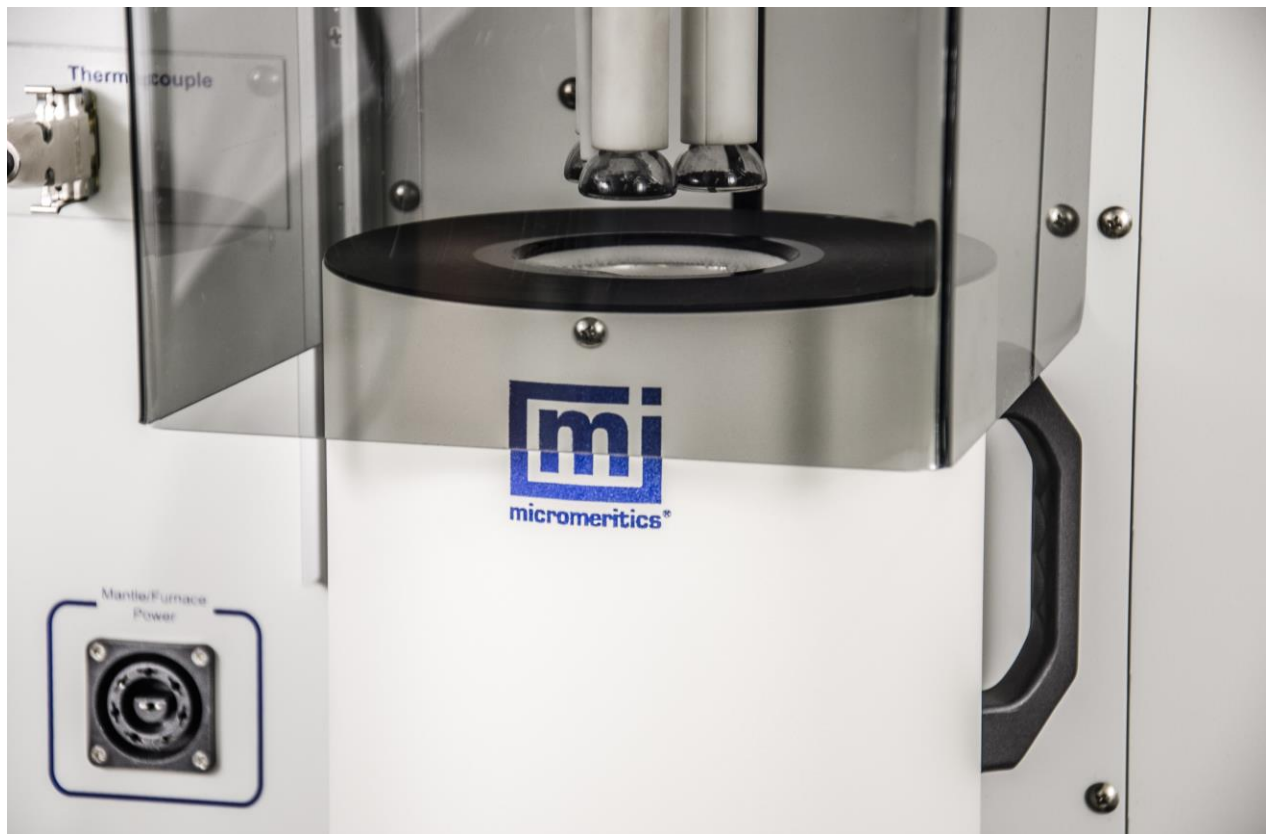

To avoid obstruction with the dewar safety shield, the dewar must be installed with the Micromeritics logo facing forward. This position will place the dewar handle close to the analyzer front panel.

**mi micromeritics®**

4356 Communications Drive, Norcross, GA 30093  
T. (770) 662-3636 [www.micromeritics.com](http://www.micromeritics.com)